

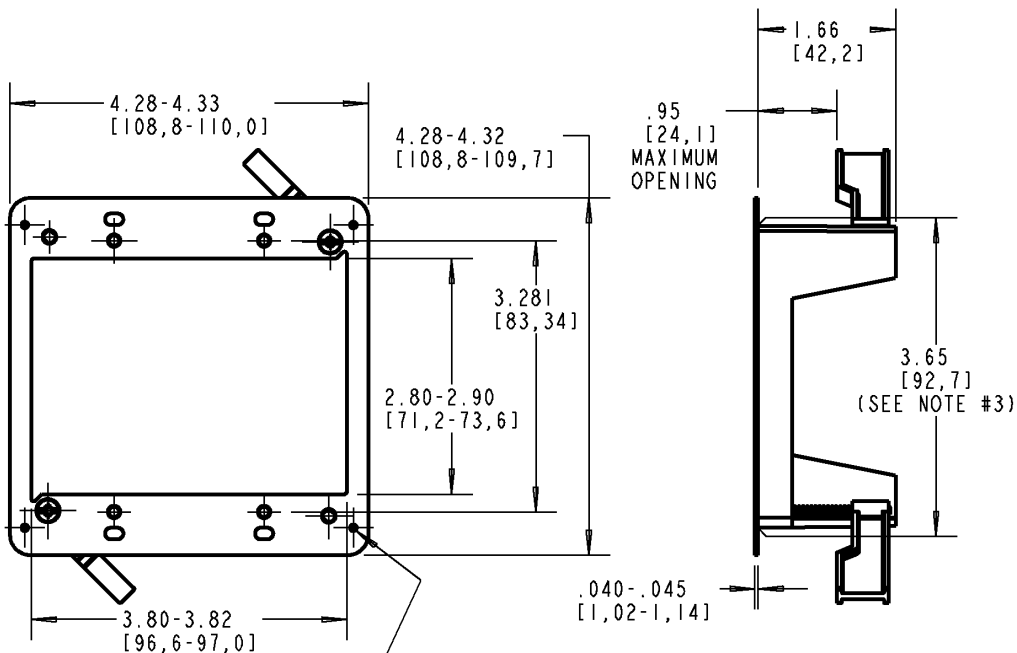


Carlton®

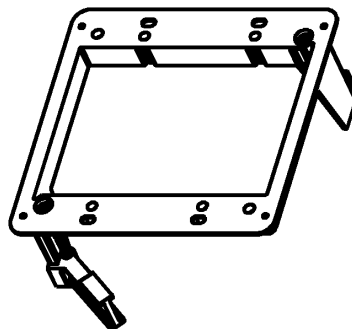

TO INSTALL, JUST FACE THE FRONT FLANGE ONTO THE DESIRED SURFACE. USING A PENCIL, MARK THE FOUR POINTS USING THE HOLES IN THE FOUR CORNERS ON THE FLANGE. DRAW A LINE CONNECTING THE FOUR POINTS, AND CUT ON THE LINES.

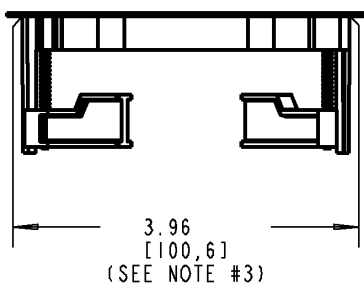

P/N SC200RR

GENERAL NOTES		Thomas & Betts www.tnb.com			
1. ALL DIMENSIONS ARE FOR REFERENCE ONLY. 2. DIMENSIONS IN BRACKETS [] ARE IN METRIC UNITS.					
REVISIONS					
** SEE ERN (****) FOR APPROVAL SIGNATURES & RELEASE DATE. PROJECT NO: ****		ORIGINAL PROJECT NO / (ERN NO)	SHEET NO:	REV. NO:	DRAWING NO:
		/ ()	1 OF 1	C	WSD-AC04768

THIS DRAWING IS INTENDED FOR DESCRIPTIVE PURPOSES ONLY. AND THE RIGHT IS RESERVED TO DEVIATE FROM ANY OF THE DETAILS SHOWN HEREON.
 ©2008 Thomas & Betts - Proprietary, All Rights Reserved

WARNING:
 FOR USE WITH LOW VOLTAGE CLASS 2 DEVICES ONLY.
 DO NOT USE AS A SUBSTITUTE FOR A CONVENTIONAL SWITCH/OUTLET BOX.

NOTES:
 1.) PRODUCT IS ORANGE W/ ORANGE FLIPPERS.
 2.) INSTALLATION HOLE DIMENSIONS: 3.96 +.10 / -.00 x 3.65 +.15 / -.00